



Laminate flooring



Your home, as new. It's that simple!

Planning a renovation? Settling into a new place?

Or maybe you just need a change?

With Vilo products you can change your place on your own:
affordable, quick and easy. And the effects will be unique.

Take the first step and change the floor.

Floor panels that are durable and easy to install will be perfect for
this purpose. You will create a whole new look for your interior,
and for you, comfort and peace of mind.



Take the first step

Nothing will change your house or flat more than a new floor. And if you expect practical solutions and great effects, choose Vilo laminate flooring. You can install your new floor by yourself or with the help of friends and family. You'll have no problems keeping them clean. The modern design, inspired by natural oak wood will add a unique touch to your interior.



Choose the best option for you

Vilo laminate flooring offers many finishing options. All available options are characterized by durability, and the other features will help you achieve a certain effect and satisfy your specific needs. Chose from the standard or V groove panels and an installation method that you find more comfortable – 1clíc2go or Twin Clic.



V-groove is a special cut along the panels that forms a small gap between them. As a result, the floor looks as if it was made of solid wooden boards.



The 1clíc2go panel joining method does not require great skills. Panels are installed one at a time by snapping on top of the preceding panel – with tongues and grooves.



In the Twin Clic panel joining method, the floor is laid in rows (panels are joined along the shorter sides) by fitting one row into another. If the room is big, make sure somebody can help you.



Abrasion class is a simple way to determine panel wear resistance. The AC4 class means that Vilo panels will ensure you many years of trouble-free home use.

Color matching is so easy!

Collection of panels

A wide selection

Textures, patterns and colors. Choose panels that will best suit the style of your interior. To achieve a greater effect, use color-matched Vilo skirting boards. Do not forget about our range of underlays which you will also find in our offer.



Panels and underlay – all from Vilo



Floor panels | Colors

Enjoy the wood effect! Noble oak structure works in different shades – from natural, warm and grey to white. With the V-groove, the floor looks as if it was made of solid wooden boards.



Wooden structure – glossy

Salt Lake Oak
8 x 192 x 1285 mm



Wooden structure – glossy

Craft Grey Oak
8 x 192 x 1285 mm



Wooden structure – glossy

Alpine Oak
8 x 192 x 1285 mm



Wooden structure

Polish Oak
8 x 192 x 1285 mm




Wooden structure – glossy


Arctic Oak
8 x 192 x 1285 mm




Easy installation
Installation of Vilo laminate flooring requires no specialist skills and does not take much time. You will do all the work by yourself or with the help of another person.




V - GROOVE



AC4
ABRASION
CLASS



1CLIC2GO



GUARANTEE
20
YEARS

Floor panels | Colors

Are you looking for something for yourself? The charm of wood matches rooms in different styles and for various purposes. You can choose not only the color, but also surface finish – natural or glossy.



Wooden structure

Natural Oak
8 x 192 x 1285 mm



Wooden structure

Pyrenean Oak
8 x 192 x 1285 mm



Wooden structure

Canyon Oak
7 x 192 x 1285 mm



Wooden structure – glossy

European Oak
8 x 192 x 1285 mm



Wooden structure

Cremona Oak
8 x 192 x 1285 mm



AC4



TWIN CLIC



GUARANTEE




AC4



TWIN CLIC



GUARANTEE

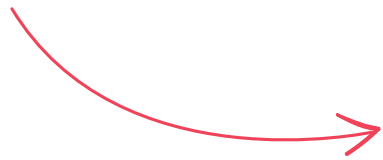

Complementary products | Underlays for panels

When deciding on panels, remember about the underlay! Appropriately selected, it will ensure load resistance, acoustic insulation and maximum underfloor heating performance.



Installing underfloor heating?
We recommend the 3 mm openwork underlay
or the 2 mm HDPE underlay. It's the best choice!

Name	Size	Material	Form	Unevenness compens	Acoustic insulation IS	Load resistance CS	Thermal conduction TR	Floor heating
Underlay for panels 3 mm	50 x 100 cm	extruded polystyrene XPS	board	≥ 1,5 mm	≥ 19 dB	≥ 65 kPa	0,032 m² K/W	
Underlay for panels 5 mm	50 x 100 cm	extruded polystyrene XPS	board	≥ 4 mm	≥ 19 dB	≥ 65 kPa	0,032 m² K/W	
Underlay for panels 5 mm puzzle	50 x 100 cm	extruded polystyrene XPS	puzzle	≥ 4 mm	≥ 19 dB	≥ 65 kPa	0,032 m² K/W	
Underlay for panels 2 mm	1,1 x 22,7 m	extruded polystyrene XPS	roll	≥ 1,5 mm	≥ 19 dB	≥ 35 kPa	0,032 m² K/W	
Underlay for panels 3 mm openwork	50 x 100 cm	extruded polystyrene XPS	board	≥ 2 mm	≥ 19 dB	≥ 30 kPa	0,032 m² K/W	●
Underlay for panels 2 mm HDPE	1 x 15 m	closed cell foam HDPE	board	≥ 1,5 mm	= 19 dB	= 60 kPa	0,036 m² K/W	●

Complementary products | Skirting boards



Every floor needs a proper finish. You will achieve the ideal effect by installing Vilo skirting boards. They are aesthetic, durable and easy to install – choose your style and color.



Vilo skirting boards	Izzi Max height 6,5 cm	Izzi height 5,5 cm	Flex height 5,5 cm	Esquero height 6,66 cm	Esquero Duo height 5,55 cm
Canyon Oak	905	7110	5114	620	
Natural Oak		734 7125	585 521		
Pyrenean Oak	902	762	5119	604	652 653
European Oak	903			630	
Cremona Oak	902	762		622 602	
Alpine Oak	905	721	582 521	607	658
Craft Grey Oak		778		626	
Polish Oak	908	7111 779	521 508	608	659
Salt Lake Oak		778	5119	626 602	
Arctic Oak	901		5101 518	622	


Floor panels | Structure

Protective layer

It protects against abrasion, chemicals and sunlight

Bearing layer

It makes up a durable and dent resistant panel base

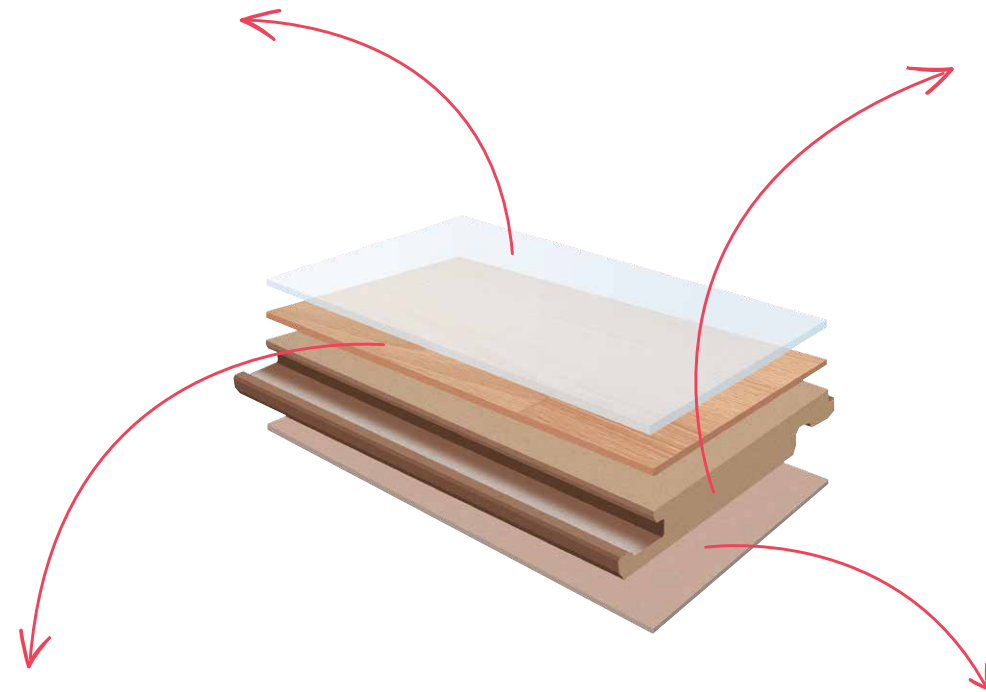

Decorative layer

It provides the visual effect – it highlights the decorative pattern

Back-pressure layer

It eliminates any stresses and maintains panel shape

Floor panels | Installation instructions

You have chosen your panels – all you need to do is to install them. You will get the effect in no time. It's really easy.

1. Store panels for 48 hours in conditions in which they will be laid. Air temperature during laying should be 20°C, and moisture – from 50 to 70%.
2. Clean the surface and level out subfloor unevenness greater than 3 mm per 1 m. Check whether subfloor moisture complies with the recommendations stated on the package.
3. Do not install panels on the subfloor using adhesive or bolts. Lay panels on special floor underlay.
4. Start laying from the left corner of the room. Point the first panel with its tongue towards the wall, and keep a distance of 15 mm from the wall. If needed, cut panels to required length.
5. Watch the online tutorials to see how to join 1 clic2go or Twin Clic panels.



Having doubts?

If you are not sure how to install Vilo floor panels, see the online tutorial on www.vilohome.com



Any colors presented in this publication are examples, and should not be considered as original ones.

