



Finishing trims B1- B6

Installation and user manual

Installation - general rules


- PVC finishing trims are a "ready to use" product. They can be installed in all types of rooms. They work especially well in humid rooms (bathrooms, kitchens).
- These types of trims are destined for the particular purpose of the Motivo walls installation, e.g. connecting them to the ceiling.
- Choose a trim colour that best matches the colour of the floor panels. Trim length: 2700 mm.

1. General rules:



- 1.1. PVC trims should be stored indoors on a dry, flat, and stable surface that guarantees no direct contact with the ground.
- 1.2. Trims should be transported horizontally.
- 1.3. Should any visible product defect or irregularity occur, immediately report it to the salesperson, before beginning the installation.
- 1.4. Installation should be performed in room temperature. Before installation the trims should be left for about 24 h in the room they are to be installed in so that they can adjust to its atmospheric conditions.
- 1.5. Changes in size are a natural and unavoidable feature of any product made of almost any material, including PVC.
- 1.6. PVC trim processing should be performed using conventional woodworking cutting tools. Fine tooth saws should be used. The mechanical woodworking tools should be used with the same or higher speed settings as used in wood processing.
- 1.7. All rules listed in the installation and user manual should be adhered to.

2. Installation on a frame

- 2.1. Preparing the tools and trims. .
- 2.2. Constructing the frame.
- 2.3. The frame should be made of wooden battens fastened directly to the wall.
- 2.4. All battens should be levelled with a spirit level to create an even surface.
Should the need arise, pads or wedges should be used to even the battens' level.
- 2.5. Battens should be laid perpendicularly to the direction of the installation of trims - if the trims are installed vertically, the battens should be laid horizontally.
- 2.6. Distance between the battens - 40 cm.

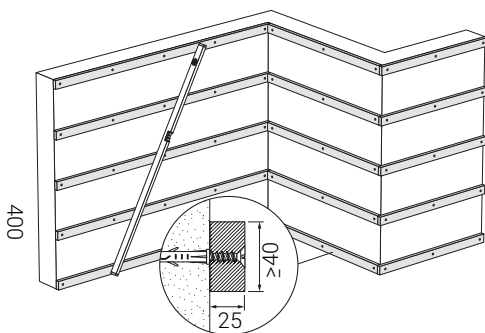

- 2.7. The battens should be made of good quality wood, without any knots, fixed to the wall in a safe and secure way with screws or other fixing elements suitable for a given surface. Battens should be left for at least 24h in a room they are to be installed in (in order to even out the temperature and humidity).

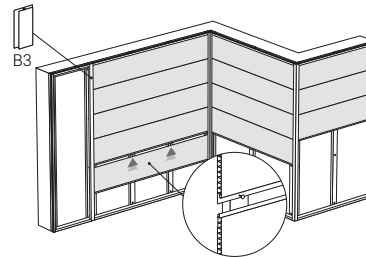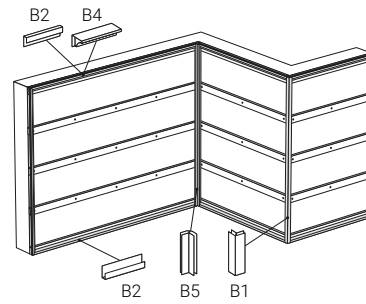

- 2.8. The B5 inside trim should be measured and cut to an appropriate length.
- 2.9. Other trims should be installed in the same way.

3. Installation using an adhesive

- 3.1. If the walls are even, a quick installation directly on the wall should be performed – using glue.
- 3.2. An assembling glue for indoor use (available in every DIY store), e.g. the Vilo glue, should be used.
- 3.3. The B5 inside trim should be measured and cut to an appropriate length, then the glue should be applied and the trim should be mounted to the wall.
- 3.4. Other trims should be installed in the same way.
- 3.5. The glue should be applied to the panel in a zig-zag pattern on the back side of it, then the panel should be mounted to the wall with the tongue facing left.
- 3.6. The panel should be pressed for several seconds, and then, the next panel can be installed.
- 3.7. B6 trims should be glued once the panels have been installed.

ATTENTION:

When installing the 105 trims, both the tongue and the groove should be cut off. In the case of 250Q trims, cut off only the tongue.

4. Cleaning

- 4.1. No spillage should be left to dry on the panels..
- 4.2. Every now and then, the surface should be cleaned with water, a gentle detergent, and a cloth.
- 4.3. Intensive scrubbing and the use of strong detergents may damage the surface of the panel or cause its discolouration.
- 4.4. Do not clean with coarse and rough cloths, sponges or brushes.
- 4.5. Never use any solvents, acids, or any other liquids based on these substances for cleaning.
- 4.6. Do not leave any detergents on the surface and rinse thoroughly after cleaning. Leaving detergents on the surface of the panel may lead to its discolouration.

5. Product usage information

- 5.1. The trims may become discoloured due to improper usage, e.g as a result of cleaning or brushing with the wrong detergents.